

APE POWER UNIT WIRELESS REMOTE CONTROL

DEEP FOUNDATIONS SOLUTIONS

KEY FEATURES

- Wireless Remote
- USB Magnetic Charging Dock
- Range Distance up to 600'
- Rugged Heavy Duty
- Ergonomic Handheld
- Waterproof
- Shockproof
- High-Impact Rated
- Engine Display
- Hydraulic Display
- Extended Battery Life

GOVERNOR

DECREASE ENGINE RPM

Press to decrease RPM by increments of 50 RPM. Hold for Min RPM.

DRIVE REVERSE

Press DRIVE REV button to ENGAGE

ENABLE BUTTON REQUIRED

Press DRIVE REV button again to disengage

DRILL SPEED DOWN

Press DRILL SPEED DOWN button to decrease speed

DRIVE HIGH / LOW

Press DRIVE HIGH / LOW button to toggle between modes.

ENABLE BUTTON REQUIRED

ATTENTION

ENABLE BUTTON

Must be depressed to activate a function:

ENGINE START DRIVE FWD DRIVE REV

DRIVE REV DRILL HIGH / LOW



VARIABLE SPEED DRILL

POWER / EMERGENCY STOP

ATTENTION

WILL SHUT OFF ENGINE, DISENGAGE DRIVE AND ALL VALVES INSTANTLY.

Control panel will stay on.



GOVERNOR

INCREASE ENGINE RPM
Press to increase RPM by increments of 50
RPM. Hold for Max RPM.

DRIVE FORWARD

Press DRIVE FWD button to ENGAGE

ENABLE BUTTON REQUIRED

Press DRIVE FWD button again to disengage

DRILL SPEED UP

Press DRILL SPEED UP button to increase speed

ENGINE START/STOP START

Press Engine Start button to start **ENABLE BUTTON IS REQUIRED**

Press Engine Stop button to shut down

the engine

NOTE: "WHILE DRIVING" If remote is out of range, Drive will go into neutral, Engine rpm will decrease to idle, and if clamp is active, clamp will stay closed.





